 


SE-CL5BT



 
Quick Start Guide Guide de démarrage rapide Kurzanleitung Guida di avvio rapido

Guía de inicio rápido Snelstartgids Snaabstartsguide クイックスタートガイド


ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones

ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones ClipWear Active Wireless Earphones


1. Set Contents/法语/德语/意大利语

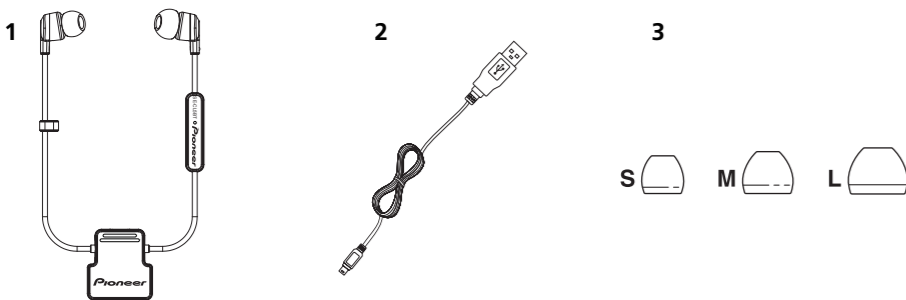

 
2. Names of Parts/法语/德语/意大利语

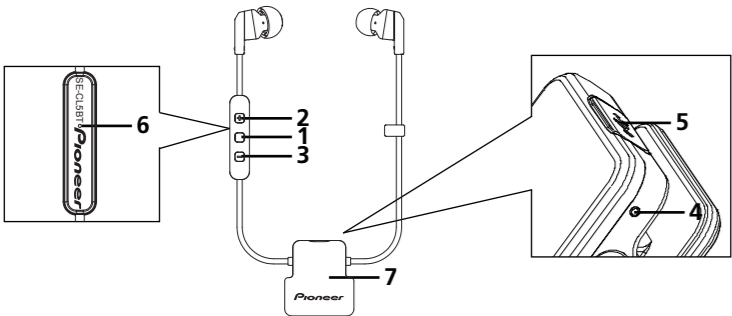

 
3. Replacing the earphone tip/法语/德语/意大利语

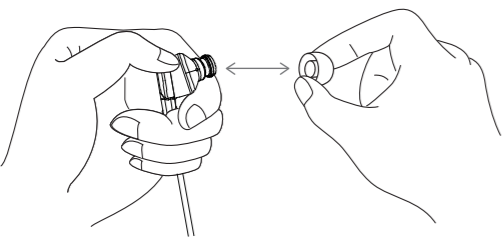

 4. Wearing the clipper/法语/德语/意大利语

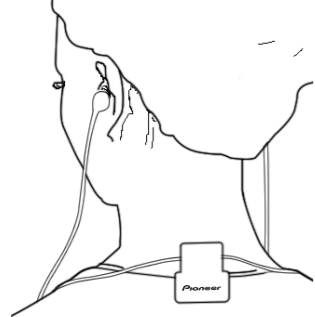

 5. Charging the batteries/法语/德语/意大利语

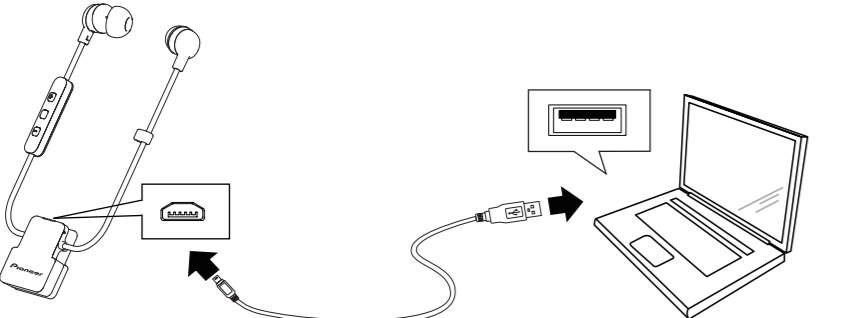

Pioneer

Unit 1033, 10/F., Star House, No. 3 Salisbury Road, Tsim Sha Tsui, Kowloon, Hong Kong

Importer in EU / Importateur en UE
Hanns-Martin-Schleyer-Str. 35, 47877 Willich, Germany / Allemagne
Importer in US and Canada / Importateur en États-Unis et Canada
Pioneer Home Entertainment U.S.A.

<U.S.A.>
22828 Lockness Avenue Torrance, CA 90501
Tel: 424-223-5203

<Germany>
Hanns-Martin-Schleyer-Straße 35, 47877 Willich, Germany
Tel: +49(0)2154 913222

<UK>
Anteros Building, Odyssey Business Park, West End Road, South Ruislip, Middlesex, HA4 6QQ United Kingdom
Tel: +44 (0) 208 363 500

<France>
Avenue de Marais F - 95816 Argenteuil Cedex FRANCE
Tel :+33(0)969 388 050

English

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/home
<Canada>
www.PioneerElectronics.ca/home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L eartips
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

(1) Installation
Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.

(2) Removal
Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles: Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).
When recharging begins, the LED indicator on the earphone will light red.
Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Français

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/home
<Canada>
www.PioneerElectronics.ca/home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L eartips
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

(1) Installation
Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.

(2) Removal
Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles: Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).
When recharging begins, the LED indicator on the earphone will light red.
Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

English

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

(1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.
The pairing mode is confirmed by LED indicator's alternately flashing blue and red.
Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

(2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.
Set Bluetooth device close (within one meter) to the wireless earphones.
These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

(3) Confirm that pairing has been successfully completed with the Bluetooth device.
Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.
The PIN code for these wireless earphones has been factory set as "0000". Input this code if requested by the Bluetooth device.

Connect to the Bluetooth device

- Confirm that the power to the wireless earphones is ON before connecting to the Bluetooth device.
- Depending on the device, connection between the wireless earphones and Bluetooth device may be effected automatically after pairing.

Disconnecting from the Bluetooth device

- Press and hold the Main Function Button until the LED turns off and the power of the device turns off.

7. Enjoying Music

To use the wireless earphones to listen to music from a Bluetooth device, you must first perform pairing with the Bluetooth device using the A2DP audio profile. For details on how to perform pairing, see < 5.Pairing >.

(1) With power to the wireless earphones' turned off, hold the MFB depressed for about three seconds.
The earphones' power will turn on and the LED indicator will flash blue.
When pairing is completed, the wireless earphones will automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Controls when listening to music

If the connected Bluetooth device supports AVCP, the following operations can be used.

- (+) button Press once: increase volume Press and hold: advance to next track or chapter
- (-) button Press once: decrease volume Press and hold: advance to previous track or chapter
- Main Function Button Press once: Play / Pause

*When sound volume is set to maximum or minimum levels, a beep sound will be produced from the headphones.
*Sound volume can be adjusted on the matching Bluetooth device.
*Depending on the specifications of the connected Bluetooth device, the music playback settings may need to be configured. Consult the user's manual for the Bluetooth device.
*Depending on the specifications of the connected Bluetooth device, a music playback application may start automatically or the music cannot be paused/played. Consult the user's manual for the Bluetooth device.

8. Vocal communication

To use the wireless earphones for vocal communication, pairing must be performed with the desired Bluetooth device using the "hands-free profile" (HFP) or "headset profile" (HSP).
For details on how to perform pairing, see < 5.Pairing >.
*If the Bluetooth device supports both profiles HFP & HSP, use the profile HFP.

Français

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

(1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.
The pairing mode is confirmed by LED indicator's alternately flashing blue and red.
Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

(2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.
Set Bluetooth device close (within one meter) to the wireless earphones.
These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

(3) Confirm that pairing has been successfully completed with the Bluetooth device.
Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.
The PIN code for these wireless earphones has been factory set as "0000". Input this code if requested by the Bluetooth device.

Connect to the Bluetooth device

- Confirm that the power to the wireless earphones is ON before connecting to the Bluetooth device.
- Depending on the device, connection between the wireless earphones and Bluetooth device may be effected automatically after pairing.

Disconnecting from the Bluetooth device

- Press and hold the Main Function Button until the LED turns off and the power of the device turns off.

7. Enjoying Music

To use the wireless earphones to listen to music from a Bluetooth device, you must first perform pairing with the Bluetooth device using the A2DP audio profile. For details on how to perform pairing, see < 5.Pairing >.

(1) With power to the wireless earphones' turned off, hold the MFB depressed for about three seconds.
The earphones' power will turn on and the LED indicator will flash blue.
When pairing is completed, the wireless earphones will automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Controls when listening to music

If the connected Bluetooth device supports AVCP, the following operations can be used.

- (+) button Press once: increase volume Press and hold: advance to next track or chapter
- (-) button Press once: decrease volume Press and hold: advance to previous track or chapter
- Main Function Button Press once: Play / Pause

*When sound volume is set to maximum or minimum levels, a beep sound will be produced from the headphones.
*Sound volume can be adjusted on the matching Bluetooth device.
*Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported.
*Depending on the specifications of the connected Bluetooth device, the music playback settings may need to be configured. Consult the user's manual for the Bluetooth device.
*Depending on the specifications of the connected Bluetooth device, a music playback application may start automatically or the music cannot be paused/played. Consult the user's manual for the Bluetooth device.

8. Vocal communication

To use the wireless earphones for vocal communication, pairing must be performed with the desired Bluetooth device using the "hands-free profile" (HFP) or "headset profile" (HSP).

For details on how to perform pairing, see < 5.Pairing >.
*If the Bluetooth device supports both profiles HFP & HSP, use the profile HFP.

(1) With power to the wireless earphones' turned off, hold the Main Function Button depressed for about 3 seconds.

The earphones' power will turn on and the LED indicator will flash blue.
When pairing is completed, the wireless earphones will automatically connect to the Bluetooth device.
*If automatic connection is not achieved, or the earphones automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Vocal communication controls

If the connected Bluetooth device supports AVCP, the following operations can be used.

- (+) button Press and hold: Increase volume
- (-) button Press and hold: Decrease volume
- Main Function Button Press once when receiving a call: Enable conversation.Press once again to end conversation.

The same controls are supported in the event a call is received while listening to music.
*When sound volume is set to maximum or minimum levels, a beep sound will be produced from the earphones.
*Sound volume can be adjusted on the matching Bluetooth device.

*Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported.
*Depending on the specifications of the connected Bluetooth device, the phone settings may need to be configured. Consult the user's manual of the Bluetooth device.

Specification

Basic
Transmission format..... Bluetooth Standard Protocol Ver. 4.1
Maximum transmission distance.....About 10m line of sight *1
Frequency used.....4GHz (2.400 GHz to 2.4835 GHz)*2
Supported Bluetooth profiles.....A2DP, AVRCP, HFP, HSP
Supported CODEC.....SBC
Battery life with continuous use.....Maximum 8 hours of continuous transmission (including music-play time)
Recharging time.....About 2 hours
Battery.....DC3.7V internally rechargeable Lithium-ion battery
Weight.....PX-4 Weight:.....21g

Recharging time.....About 2 hours
Battery.....DC3.7V internally rechargeable Lithium-ion battery
Weight.....PX-4 Weight:.....21g

Headphone
Type.....Fully-enclosed dynamic earphones
Driver units..... ϕ 9.2mm
Impedance.....16 ohm
Frequency response.....20 Hz ~ 20 000 Hz
Sensitivity.....95 dB

Accessories
S, M, L eartips.....1pc
Micro-USB cable (50cm).....1pc
Warranty card(Europe / U.S.A. and Canada / Japan).....1pc
Quick Start Guide (this document).....1pc
Safety Guide.....1pc
*1 Transmission distance is an approximation. Actual usable distance may vary depending on surrounding conditions.
*2 This product utilizes radio wave in the 2.4 GHz spectrum. Some signal dropouts may be experienced due to interference with radios, microwave ovens, and other devices using 2.4 GHz spectrum.

Note

Specifications and design are subject to possible modifications without notice due to improvements.

About License and Trademarks

- "Pioneer" is a trademark of Pioneer Corporation, and is used under license.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Onkyo Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Android is a trademark of Google Inc.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

English

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/home
<Canada>
www.PioneerElectronics.ca/home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L eartips
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

(1) Installation
Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.

(2) Removal
Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles: Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).
When recharging begins, the LED indicator on the earphone will light red.
Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Deutsch

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/home
<Canada>
www.PioneerElectronics.ca/home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L eartips
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

(1) Installation
Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.

(2) Removal
Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles: Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).
When recharging begins, the LED indicator on the earphone will light red.
Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Deutsch

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

(1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.
The pairing mode is confirmed by LED indicator's alternately flashing blue and red.
Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

(2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.
Set Bluetooth device close (within one meter) to the wireless earphones.
These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

(3) Confirm that pairing has been successfully completed with the Bluetooth device.
Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.
The PIN code for these wireless earphones has been factory set as "0000". Input this

Español

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/Home
<Canada>
www.PioneerElectronics.ca/Home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphones
- Micro-USB cable
- S, M, L earplugs
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

- (1) Installation**
 - Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.
- (2) Removal**
 - Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles. Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

- Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).**
- When recharging begins, the LED indicator on the earphone will light red.
 - Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

English

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

- (1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.**
 - The pairing mode is confirmed by LED indicator's alternatively flashing blue and red.
 - Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

- (2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.**
 - Set Bluetooth device close (within one meter) to the wireless earphones.
 - These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

- (3) Confirm that pairing has been successfully completed with the Bluetooth device.**
 - Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
 - When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.

- (4) When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.**
 - The PIN code for these wireless earphones has been factory set as "0000". Input this code if requested by the Bluetooth device.
 - The PIN code for these wireless earphones is ON before connecting to the Bluetooth device.
 - Depending on the device, connection between the wireless earphones and Bluetooth device may be effected automatically after pairing.

Disconnecting from the Bluetooth device

- Press and hold the Main Function Button until the LED turns off and the power of the device turns off.

7. Enjoying Music

To use the wireless earphones to listen to music from a Bluetooth device, you must first perform pairing with the Bluetooth device using the A2DP audio profile. For details on how to perform pairing, see < 5.Pairing >.

- With power to the wireless earphones "turned off, hold the MFB depressed for about three seconds.
The earphones' power will turn on and the LED indicator will flash blue.
- Turn on the Bluetooth function on the device you wish to connect to.
When pairing is completed, the wireless earphones will automatically connect to the Bluetooth device.
*If automatic connection is not achieved, or the earphones automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Controls when listening to music

- If the connected Bluetooth device supports AVFP, the following operations can be used.
 - (+) button
 - Press once: increase volume
 - Press and hold: advance to next track or chapter
 - (-) button
 - Press once: decrease volume
 - Press and hold: advance to previous track or chapter
 - Main Function Button
 - Press once: Play / Pause
 - When sound volume is set to maximum or minimum levels, a beep sound will be produced from the headphones.
 - "Sound volume can be adjusted on the matching Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported."
 - "Depending on the specifications of the connected Bluetooth device, the music playback settings may need to be configured. Consult the user's manual for the Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, a music playback application may start automatically or the music cannot be paused/played. Consult the user's manual for the Bluetooth device."

8. Vocal communication

To use the wireless earphones for vocal communication, pairing must be performed with the desired Bluetooth device using the "hands-free profile" (HFP) or "headset profile" (HSP).
For details on how to perform pairing, see < 5.Pairing >.
*If the Bluetooth device supports both profiles HFP & HSP, use the profile HFP.

- With power to the wireless earphones "turned off, hold the Main Function Button depressed for about 3 seconds.
The earphones' power will turn on and the LED indicator will flash blue.
- Turn on the Bluetooth function on the device you wish to connect to.
When pairing is completed, the wireless earphones will automatically connect to the Bluetooth device.
*If automatic connection is not achieved, or the earphones automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Vocal communication controls

- If the connected Bluetooth device supports AVRC, the following operations can be used.
 - (+) button
 - Press and hold: Increase volume
 - (-) button
 - Press and hold: Decrease volume
 - Main Function Button
 - Press once when receiving a call: Enable conversation.Press once again to end conversation.
 - Press and hold when receiving a call: Refuse communication

The same controls are supported in the event a call is received while listening to music.
*When sound volume is set to maximum or minimum levels, a beep sound will be produced from the earphones.
*Sound volume can be adjusted on the matching Bluetooth device.
*Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported.
*Depending on the specifications of the connected Bluetooth device, the phone settings may need to be configured. Consult the user's manual of the Bluetooth device.

Specification

Basic	Transmission format.....	Bluetooth Standard Protocol Ver. 4.1
	Maximum transmission distance.....	About 10m line of sight *1
	Frequency used.....	4GHz (2.400 GHz to 2.485 GHz)*2
	Supported Bluetooth profiles.....	A2DP, AVRC, HFP, HSP
	Supported CODEC.....	SBC
	Battery life with continuous use.....	Maximum 8 hours of continuous transmission (including music-play time)
	Recharging time.....	About 2 hours
	Battery.....	DC3.7V internally rechargeable Lithium-ion battery
	Weight.....	IPX 4
Headphone	Type.....	Fully-enclosed dynamic earphones
	Driver units.....	φ9.2mm
	Impedance.....	16 ohm
	Frequency response.....	20 Hz ~ 20,000 Hz
	Sensitivity.....	95 dB
Accessories	S, M, L earplugs.....	1pc
	Micro-USB cable (50cm).....	1pc
	Warranty card(Europe / U.S.A. and Canada / Japan).....	1pc
	Quick Start Guide (this document).....	1pc
	Safety Guide.....	1pc
	*1 Transmission distance is an approximation. Actual usable distance may vary depending on surrounding conditions.	
	*2 This product utilizes radio wave in the 2.4 GHz spectrum. Some signal dropouts may be experienced due to interference with radios, microwave ovens, and other devices using 2.4 GHz spectrum.	

Note

Specifications and design are subject to possible modifications without notice due to improvements.

About License and Trademarks

- "Pioneer" is a trademark of Pioneer Corporation, and is used under license.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ohnyo Corporation is under license. Other trademarks and trade name are those of their respective owners.
- Android is a trademark of Google Inc.

Svenska

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/Home
<Canada>
www.PioneerElectronics.ca/Home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphones
- Micro-USB cable
- S, M, L earplugs
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

- (1) Installation**
 - Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.
- (2) Removal**
 - Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles. Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

- Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).**
- When recharging begins, the LED indicator on the earphone will light red.
 - Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Swedish

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

- (1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.**
 - The pairing mode is confirmed by LED indicator's alternatively flashing blue and red.
 - Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

- (2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.**
 - Set Bluetooth device close (within one meter) to the wireless earphones.
 - These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

- (3) Confirm that pairing has been successfully completed with the Bluetooth device.**
 - Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
 - When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.

- (4) When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.**
 - The PIN code for these wireless earphones has been factory set as "0000". Input this code if requested by the Bluetooth device.
 - The PIN code for these wireless earphones is ON before connecting to the Bluetooth device.
 - Depending on the device, connection between the wireless earphones and Bluetooth device may be effected automatically after pairing.

Disconnecting from the Bluetooth device

- Press and hold the Main Function Button until the LED turns off and the power of the device turns off.

7. Enjoying Music

To use the wireless earphones to listen to music from a Bluetooth device, you must first perform pairing with the Bluetooth device using the A2DP audio profile. For details on how to perform pairing, see < 5.Pairing >.

- With power to the wireless earphones "turned off, hold the MFB depressed for about three seconds.
The earphones' power will turn on and the LED indicator will flash blue.
- Turn on the Bluetooth function on the device you wish to connect to.
When pairing is completed, the wireless earphones will automatically connect to the Bluetooth device.
*If automatic connection is not achieved, or the earphones automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

 
Controls when listening to music

- If the connected Bluetooth device supports AVFP, the following operations can be used.
 - (+) button
 - Press once: increase volume
 - Press and hold: advance to next track or chapter
 - (-) button
 - Press once: decrease volume
 - Press and hold: advance to previous track or chapter
 - Main Function Button
 - Press once: Play / Pause
 - When sound volume is set to maximum or minimum levels, a beep sound will be produced from the headphones.
 - "Sound volume can be adjusted on the matching Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported."
 - "Depending on the specifications of the connected Bluetooth device, the music playback settings may need to be configured. Consult the user's manual for the Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, a music playback application may start automatically or the music cannot be paused/played. Consult the user's manual for the Bluetooth device."


8. Vocal communication

To use the wireless earphones for vocal communication, pairing must be performed with the desired Bluetooth device using the "hands-free profile" (HFP) or "headset profile" (HSP).
For details on how to perform pairing, see < 5.Pairing >.
*If the Bluetooth device supports both profiles HFP & HSP, use the profile HFP.


1. Set Contents/西班牙语/荷兰语/瑞典语/日语

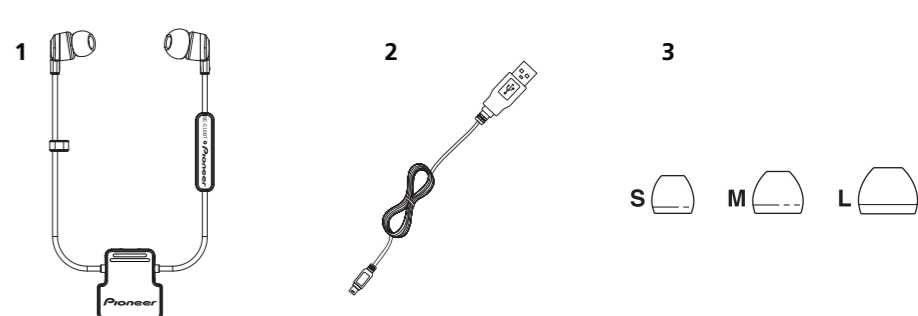

 
2. Names of Parts/西班牙语/荷兰语/瑞典语/日语

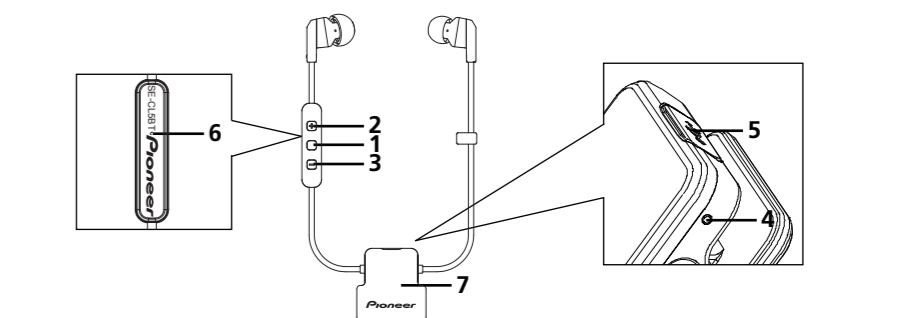

 
3. Replacing the earphone tip/西班牙语/荷兰语/瑞典语/日语

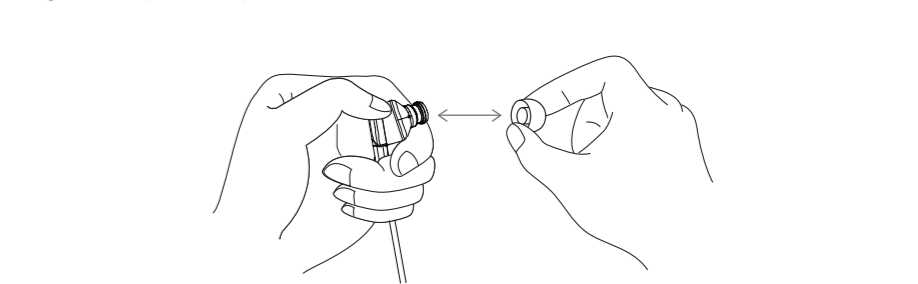

 4. Wearing the clipper/西班牙语/荷兰语/瑞典语/日语

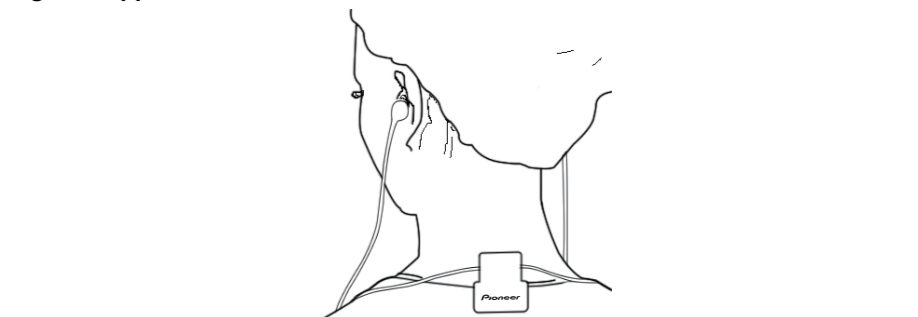

 5. Charging the batteries/西班牙语/荷兰语/瑞典语/日语

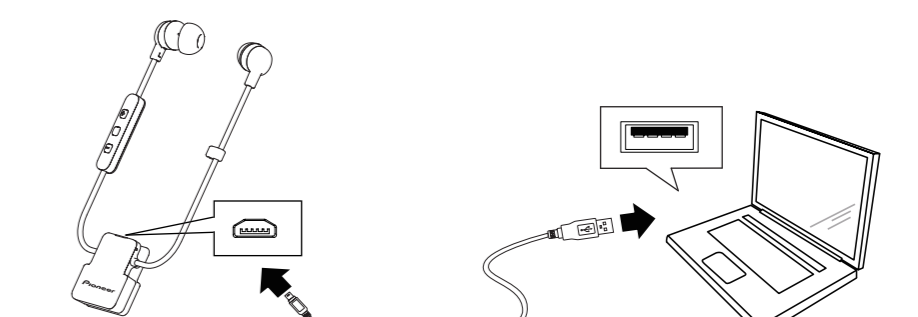

Nederlands

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/Home
<Canada>
www.PioneerElectronics.ca/Home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L earplugs
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

- (1) Installation**
 - Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.
- (2) Removal**
 - Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles. Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

- Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).**
- When recharging begins, the LED indicator on the earphone will light red.
 - Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Japanese

Before you start

This document describes the information and operations required for startup. For more advanced operation procedures, read the instruction manual which is available on the website.

<Europe>
http://www.pioneer-audiovisual.eu/
<U.S.A.>
www.PioneerElectronics.com/Home
<Canada>
www.PioneerElectronics.ca/Home

1. Set Contents

Confirm the presence of all parts and components before use.

- Earphone
- Micro-USB cable
- S, M, L earplugs
- Warranty card (Europe / U.S.A. and Canada / Japan)
- Quick Start Guide (this document)
- Safety Guide

2. Names of Parts (see Fig.2)

- Main Function Button
- Volume Up Button
- Volume Down Button
- LED Indicator
- Micro-USB Port
- Microphone
- Clipper

3. Replacing the earphone tip (see Fig.3)

- (1) Installation**
 - Press the mounting surface firmly onto the nozzle.Failure to press the tip fully onto the nozzle may cause the tip to come off.
- (2) Removal**
 - Hold the earphone body securely and twist off the earphone tip.

4. Wearing the clipper how you like it

The clipper is designed as a clothing clip. This gives you a variety of simple and practical wearing styles. Just clip it on your shirt, jacket, t-shirt or whatever that fits your needs. Just clip it on the neckline (as shown in figure 4), collar edge, or wherever that fits your needs.

5. Charging the batteries

The unit's battery must be recharged before use.
The accessory micro-USB cable must be used for recharging the unit's battery.

- Connect the appropriate connector on the accessory micro-USB cable to the micro-USB port on the earphones, and the USB plug on the other end to a USB port on a computer (see Fig.5).**
- When recharging begins, the LED indicator on the earphone will light red.
 - Full recharging requires about 2 hours, when recharging is completed, the LED indicator will turn blue.

Note

- Battery recharging time and usable battery time may vary depending on ambient temperature and frequency of use.

Notes on battery charging

- Battery performance is influenced by surrounding temperature. Charge the supplied rechargeable batteries within a temperature range 10 to 35 degrees Celsius.
- Batteries become slightly warm when charging. This is not a malfunction.
- Recharging may not be possible if computer is in power-saving mode.
- The unit cannot be used during charging.

Japanese

6. Pairing

Pairing must be performed before the earphones can be used to listen the music or communicate using a Bluetooth device.
For further details regarding the pairing procedure, consult the user's manual for your Bluetooth device.

- (1) While the power of the unit is off, press and hold the Main Function Button until the unit enters pairing mode.**
 - The pairing mode is confirmed by LED indicator's alternatively flashing blue and red.
 - Release the Main Function Button after confirming that the LED indicator is alternately lighting blue and red.

- (2) Turn on the power to the Bluetooth device you are going to pair with, and begin pairing; search for this unit (wireless earphones) from the paired Bluetooth device.**
 - Set Bluetooth device close (within one meter) to the wireless earphones.
 - These wireless earphones will appear in the Bluetooth device's display as "Pioneer SE-CL5BT".

- (3) Confirm that pairing has been successfully completed with the Bluetooth device.**
 - Look at the display for the Bluetooth-enabled device and select "Pioneer SE-CL5BT".
 - When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.

- (4) When the LED is flashing in blue slowly about once every 3 seconds, pairing is completed.**
 - The PIN code for these wireless earphones has been factory set as "0000". Input this code if requested by the Bluetooth device.
 - The PIN code for these wireless earphones is ON before connecting to the Bluetooth device.
 - Depending on the device, connection between the wireless earphones and Bluetooth device may be effected automatically after pairing.

Disconnecting from the Bluetooth device

- Press and hold the Main Function Button until the LED turns off and the power of the device turns off.

7. Enjoying Music

To use the wireless earphones to listen to music from a Bluetooth device, you must first perform pairing with the Bluetooth device using the A2DP audio profile. For details on how to perform pairing, see < 5.Pairing >.

- With power to the wireless earphones "turned off, hold the MFB depressed for about three seconds.
The earphones' power will turn on and the LED indicator will flash blue.
- Turn on the Bluetooth function on the device you wish to connect to.
When pairing is completed, the wireless earphones will automatically connect to the Bluetooth device.
*If automatic connection is not achieved, or the earphones automatically connect to a different Bluetooth device than the one you wish to use, follow the instructions for the desired Bluetooth device regarding manual connection.

Controls when listening to music

- If the connected Bluetooth device supports AVFP, the following operations can be used.
 - (+) button
 - Press once: increase volume
 - Press and hold: advance to next track or chapter
 - (-) button
 - Press once: decrease volume
 - Press and hold: advance to previous track or chapter
 - Main Function Button
 - Press once: Play / Pause
 - When sound volume is set to maximum or minimum levels, a beep sound will be produced from the headphones.
 - "Sound volume can be adjusted on the matching Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, the controls noted above and controls on the Bluetooth device may not be supported."
 - "Depending on the specifications of the connected Bluetooth device, the music playback settings may need to be configured. Consult the user's manual for the Bluetooth device."
 - "Depending on the specifications of the connected Bluetooth device, a music playback application may start automatically or the music cannot be paused/played. Consult the user's manual for the Bluetooth device."

8. Vocal communication

To use the wireless earphones for vocal communication, pairing must be performed with the desired Bluetooth device using the "hands-free profile" (HFP) or "headset profile" (HSP).
For details on how to perform pairing, see < 5.Pairing >.
*If the Bluetooth device supports both profiles HFP & HSP, use the profile HFP.